

Basic operation of Inspector II Tint Meter

Step 1

Wipe the window clean if it is very dirty. Light dust or water spots will have little effect on the reading. **With the 2 units held together, turn on both switches.** The meter will auto calibrate and display “100)



Inspector II turning on

Step 2

Leaving both units turned on, separate the 2 boxes and place the light source box behind the glass to test. Hold it in place by hand or using the suction cup.

Step 3

Place the display unit on the other side of the glass and allow the magnets to self align. The display will show the Visible Light Transmisson (VLT) reading. **Turn both units off when testing is complete.**



Inspector II on window

OFFICER SAFETY – the following are considerations when using the tint meter

- Vehicles should be stopped in suitable locations – off the carriageway with suitable street lighting and emergency equipment illuminated
- Wear your High Visibility Jacket
- Ensure the driver removes the keys from the ignition
- Ask any occupants to exit the vehicle and stand in a safe location
- Update Control room of your location and task.