

# Basic operation of Enforcer II Tint Meter

## Step 1

Roll window down half way. Wipe the window clean if it is very dirty. Light dust or water spots will have little effect on the reading.

Position meter so the bottom of the foam covered slot is over the edge of the glass.



## Step 2

Press the meter downward until the window is touching the top of the foam slot. The meter will display the Visible Light Transmission (VLT) reading.



## OFFICER SAFETY – the following are considerations when using the tint meter

- Vehicles should be stopped in suitable locations – off the carriageway with suitable street lighting and emergency equipment illuminated
- Wear your High Visibility Jacket
- Ensure the driver removes the keys from the ignition
- Ask any occupants to exit the vehicle and stand in a safe location
- Update Control room of your location and task.